



JBL Pulse Button Board Replacement

A guide on how to breakdown the button panel in order to replace the button board.

Written By: Maxwell Busenbarrick



INTRODUCTION

Often times when buttons have become unresponsive, a faulty button board may be the cause. In this guide we will show you how to access and replace the button board.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Button Board




- Use a plastic opening tool to pry around the edges of the circular rubber panel.

Step 2



- Once the edges are loose, pull off the rubber button panel completely.
- ☑ New adhesive will have to be applied when reassembling.

Step 3

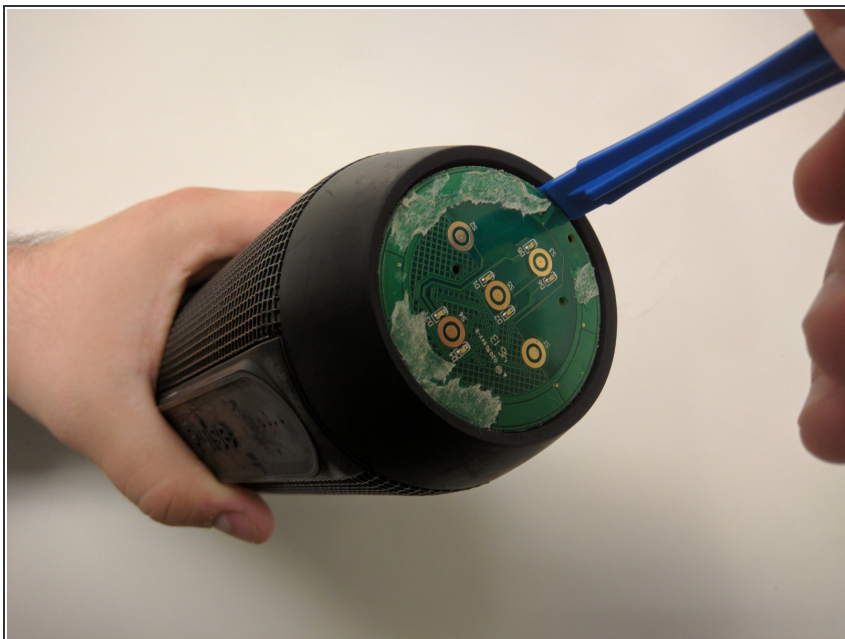


- Use your plastic opening tool to pry the button board loose by lifting the edges.

Step 4



- Lift the button board, exposing the attached cable.
- ☑ New adhesive will have to be applied when reassembling.

Step 5

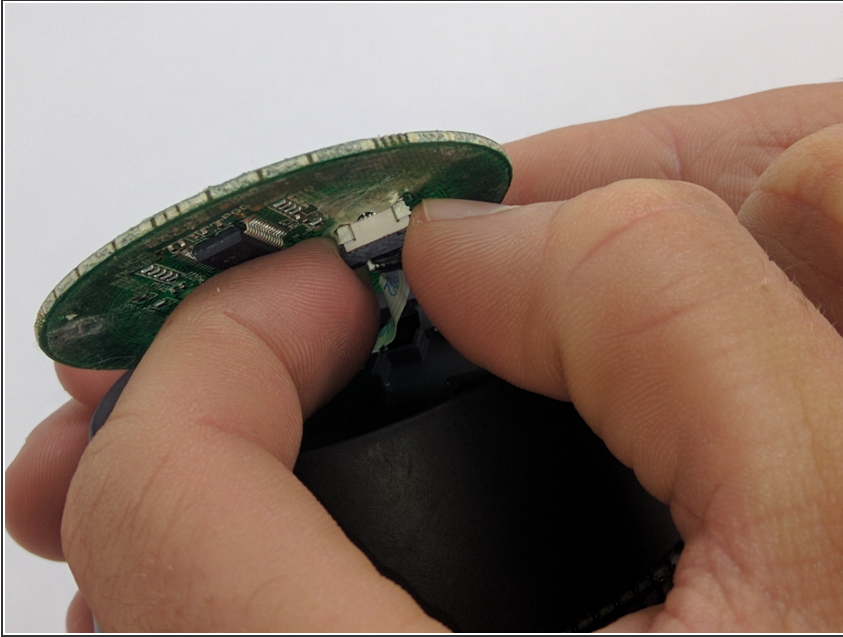

- Pull black piece on top of socket away from board to loosen, then detach the cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 03:33:40 PM.